



**PRODUCT MANUAL FOR  
TS-70GB SPEAKER STAND  
(ITEM #14018)**

# GET LASTING VALUE!

## Safe & Secure

Supports more weight than other lightweight stands; locking pin for absolute speaker security.


## Truly Portable

Quickly folds into an ultra-slim, lightweight unit.

## Versatile & Reliable

Includes integrated socket adapter and foot caps that won't fall off.


## Set-up

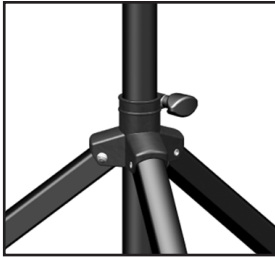

1. Loosen leg fitting hand knob.
2. Slide leg fitting down to maximum diameter of leg spread (leg braces should be parallel to the floor). Tighten hand knob.



3. Remove safety pin from slot on upper telescoping tube. Loosen hand knob on telescoping collar and raise center tube 6-10". Retighten hand knob.

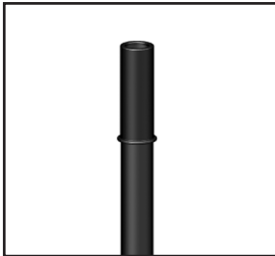

4. Select the correct size socket adapter. Put speaker cabinet on top. Slowly loosen the hand knob and raise the cabinet to desired height. Tighten hand knob. Insert safety pin into slot on the telescoping tube.



5. To lower speaker, remove the safety pin from the slot. Slowly loosen the hand knob. Use caution and slowly lower the upper telescoping tube. Tighten hand knob and remove speaker cabinet.

## Special Instructions

1. Occasionally clean the stand with a damp cloth or non-abrasive cleaner. Do not lubricate or use silicone spray on the center tube.
2. When loading the tripod, ONLY add the speaker when the tripod is in a fully upright position (all legs on the floor).
3. Do not drag the Tripod Speaker Stand while it is loaded; this could cause breakage of the fittings and result in damage to the stand.
4. When supporting equipment, check that the telescoping collar is securely tightened and the safety pin is inserted into slot on upper telescoping tube.
5. Always release the collar with caution and stand clear of load.