

## DFT 120 TELEPHONE INPUT

The DFT120 has been engineered to operate from a **LOOP START** or a **DRY LOOP** (Page Port). If these are not available, a **UT11** (Universal Telephone Interface) will be needed.

