


UTI1 to DFT120

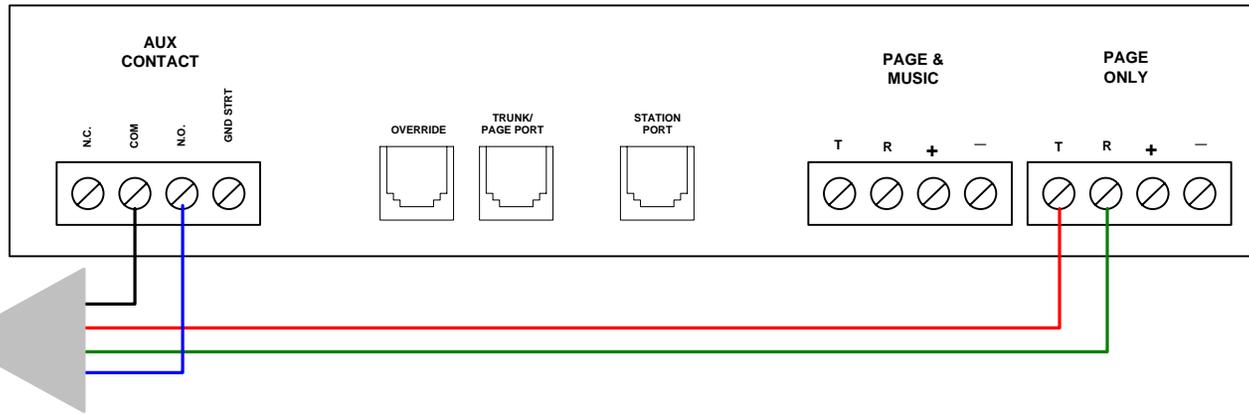

The DFT120 is designed to accept a Loop Start, Page Port, or a Page Port .
If these are not available the UTI1 will be required.

